
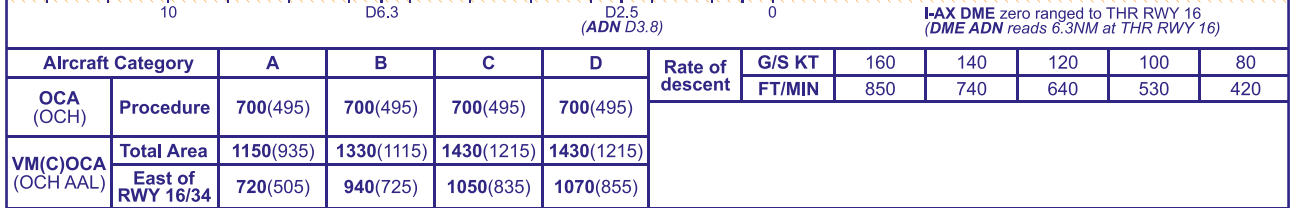


**ABERDEEN/DYCE**  
**LOC/DME**  
**RWY 16**  
(ACFT CAT A,B,C,D)



**ALTERNATIVE PROCEDURE BASE TURN REVERSAL**  
From VOR ADN: fly outbound on R008 (CAT A,B) or R034 (CAT C,D) descending as required to **not below 2500**. At I-AX DME 8.8 (ADN DME 3) base turn left to intercept the LOC. When established continue as for main procedure.

**NOTE 1** Subject to ATC approval, aircraft inbound to VOR ADN may descend to **2900** when within 10NM of DME ADN and to **2500** when within 6NM of DME ADN.  
**2** VOR ADN is 0.35NM east of LOC.  
**3** I-AX DME and ADN DME not co-located. Ensure correct range cross check is used for the DME received.

CHANGE (4/26): MAG INFO REVISED. MAG HEADINGS.